TOP AND CONSOLE PARTS

27"ELECTRIC DRYER

For Models: GEW9868KQ1, GEW9868KL1, GEW9868KT1
(Designer White) (Pewter) (Biscuit)

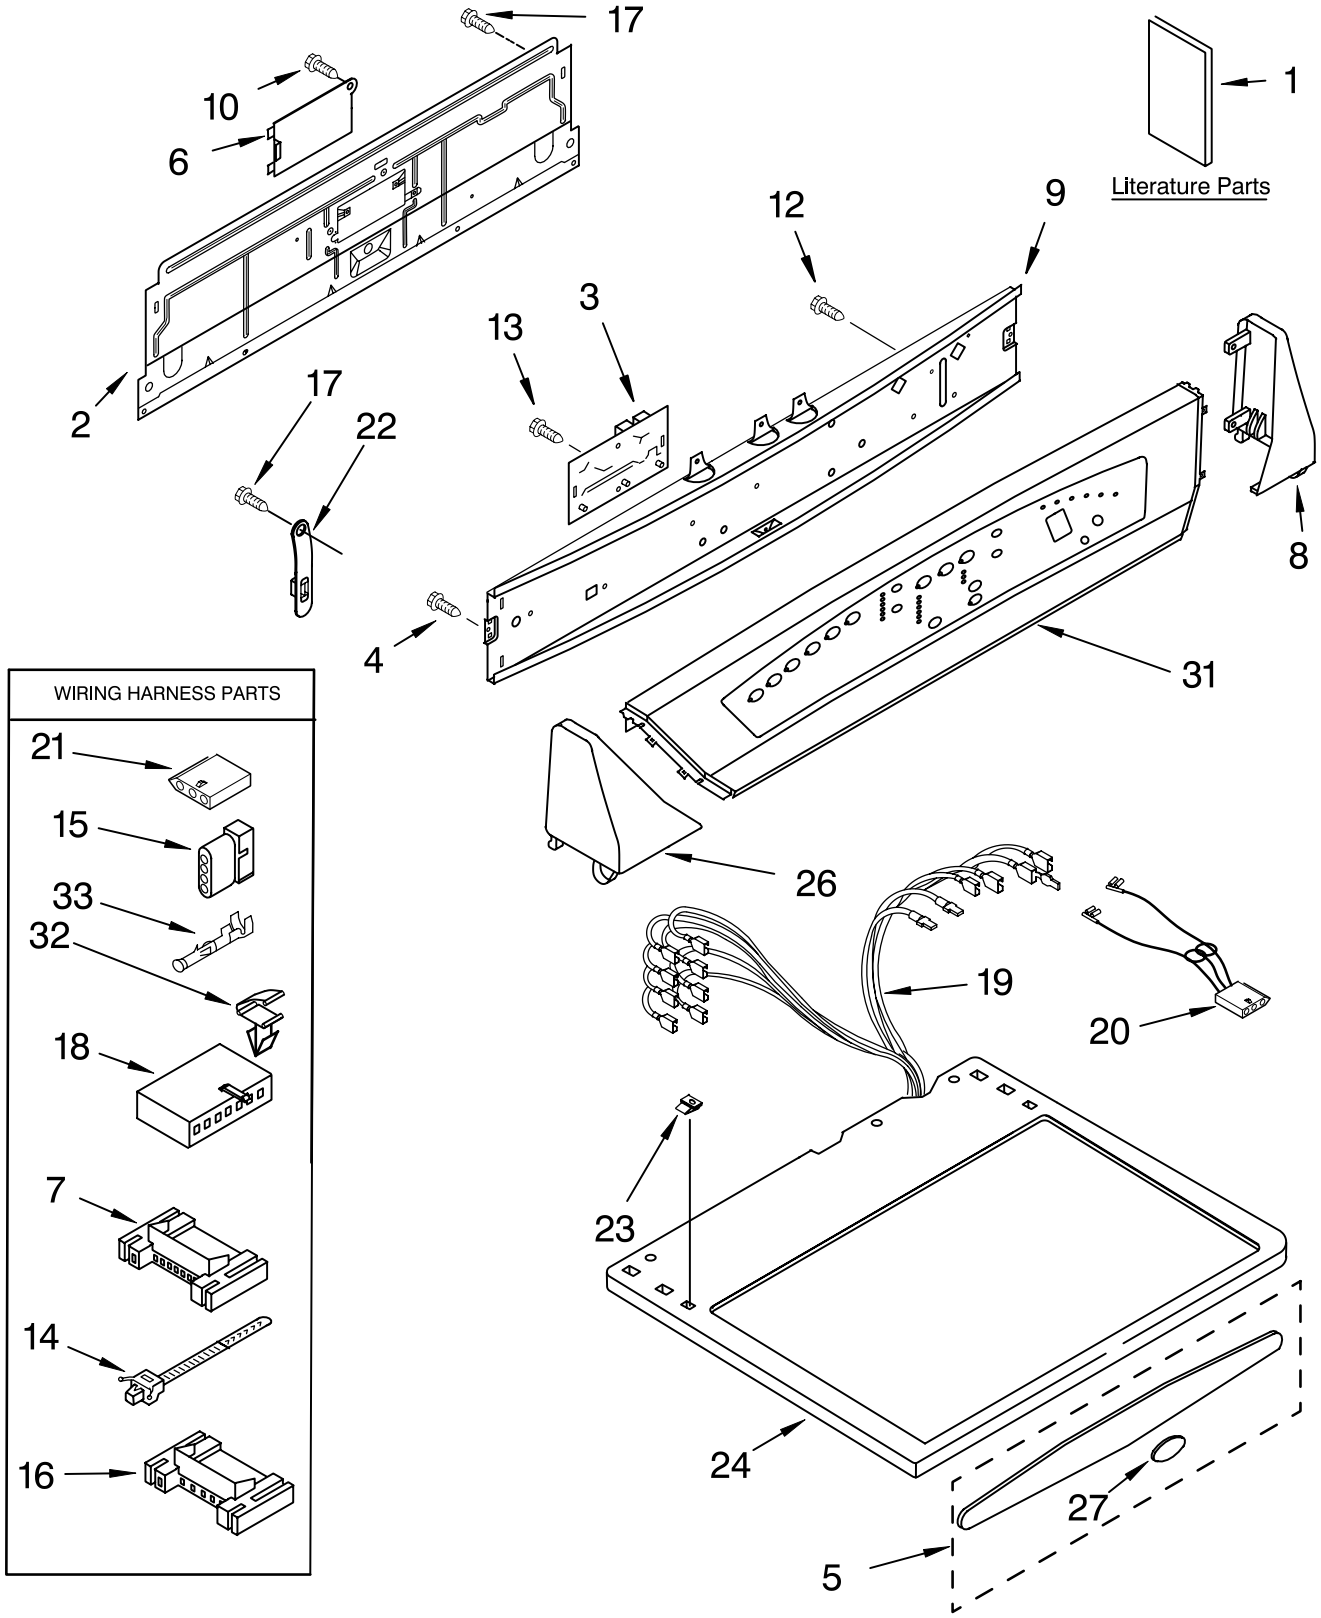

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

For Models: GEW9868KQ1, GEW9868KL1, GEW9868KT1
(Designer White) (Pewter) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT3979716	Label, Wiring Diagram
	LIT8528148	Guide, Use & Care
	LIT3979171	Instructions Installation
	LIT3979621	Tech Sheet
Following May Be Purchased		
DO−IT−YOURSELF REPAIR MANUALS		
	LIT677818	Manual, Do−It−Yourself Repair (Dryer)
2	8274338	Panel, Rear Console
3	3978916	Control Board
4	304231	Screw, 8−18 x 1/2
5		Medallion Assembly
	8521943	Sage
	8521944	Pewter
6	8317342	Cover, Terminal Block
7	3395683	Connector (Motor)
8		Cap, End (R.H.)
	8299686	White
	8299688	Pewter
	8299687	Biscuit
9	8299690	Bracket, Control
10	3390814	Screw, 8−18 x 3/8
12	3400073	Screw, 10−24 x 5/16
13	3400826	Screw, 8−18 x 3/4
14	3391018	Tie, Cable
15	353424	Connector
16	2203186	Connector
17	693995	Screw, 8−18 x 3/8
18	3936150	Connector, 7−Circuit
19	8529975	Harness, Electric
20	3406653	Sensor, Harness
21	3936144	Connector, 3−Circuit
22	8318255	Strap, Console
23	357213	Nut, Push−In (2)
24		Top
	3978832	White
	3978837	Pewter
	3978833	Biscuit
26		Cap, End (L.H.)
	8299683	White
	8299685	Pewter
	8299684	Biscuit
27	8316751	Medallion
31		Panel, Console (Includes Keyswitch)
	3978825	Pearl
	3978826	Pewter
32	3394427	Clip, Harness
33	94614	Terminal

CABINET PARTS

For Models: GEW9868KQ1, GEW9868KL1, GEW9868KT1
(Designer White) (Pewter) (Biscuit)

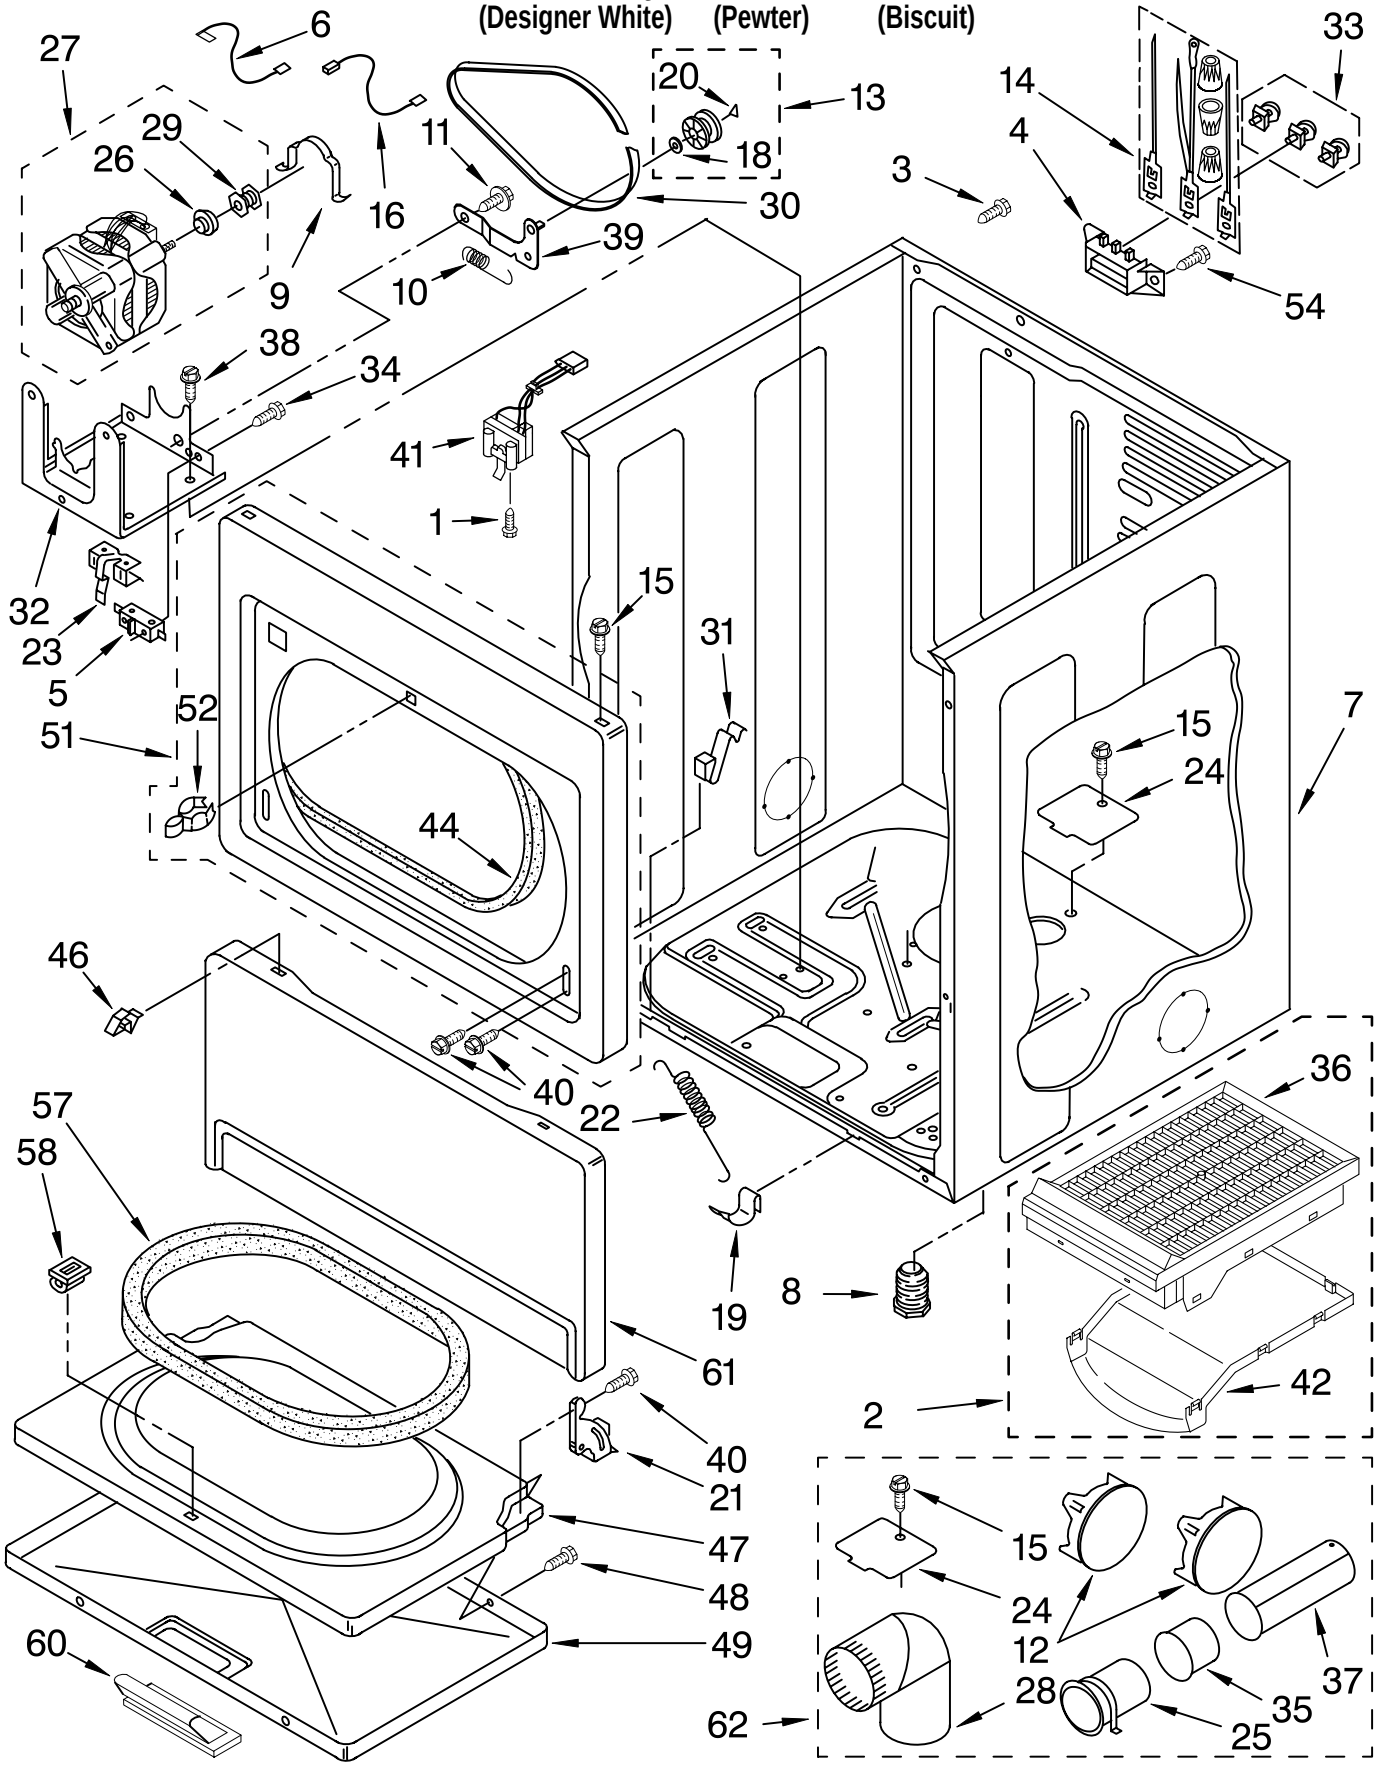

CABINET PARTS

For Models: GEW9868KQ1, GEW9868KL1, GEW9868KT1
(Designer White) (Pewter) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	697773	Screw, 6−20 x 7/8
2	3406911	Dry Rack Assembly
3	697776	Screw, 10−32 x 5/8
4	3397659	Block, Terminal
5	3394881	Switch, Broken Belt
6	3398948	Wire, Jumper (Broken Belt Switch)
7		Cabinet
	8310656	White
	8528155	Pewter
	8310659	Biscuit
8	3392100	Foot, Dryer
	279810	Foot − Optional (Extended Length Package Of 2) (Not Included)
9	660658	Clamp, Motor (2)
10	3387374	Spring, Idler
11	3389420	Retainer, Idler
12		Plug, Multivent
	697750	White
	3979261	Pewter
	3388311	Biscuit
13	3388672	Pulley Assembly
14	279318	Terminal, Brass & Tinned (3) (Includes Illus. 33)
15	3390647	Screw, 8−18 x 1/2
16	3394081	Wire, Belt Switch
18	233520	Washer, Thrust
19	297092	Clip (2)
20	690997	Tri Ring
21	3387560	Hinge, Door (R.H.)
	3387559	Hinge, Door (L.H.)
22	3387565	Spring, Door (2)
23	3391408	Lever, Snap Switch
24	3394331	Cover−Plate
25	3395532	Exhaust Pipe & Bracket
26	3393657	Restrainer, Belt
27	661655	Motor, Assembly 60 HZ.
28	49026	4" − 90° Elbow
29	3389729	Pulley 60 HZ.
30	3387610	Belt, Drive
31	3388600	Clip, Lint, Duct
32	3387118	Bracket, Motor
33	279393	Terminal Block Screw Kit (For Terminal Block)
34	98129	Screw, 6−20 x 1 3/8
35	3395534	Exhaust Pipe (Short)
36	3406910	Dry Rack (Top)
37	3395535	Exhaust Pipe (Long)
38	3390663	Screw, 10−16 x 1/2
39	3388674	Idler Bracket
40	3357011	Screw, 10−16 x 1/2
41	3406107	Door Switch Assembly
42	3406908	Dry Rack (Bottom)
44	3387242	Seal, Front Panel
46	3388229	Retainer
47	697655	Door, Rear
48	694091	Screw, 8−18 x 3/8
49		Door, Front
	8521938	White
	8521936	Pewter
	8521939	Biscuit
51		Upper Front Panel
	697227	White
	3979198	Pewter
	3977761	Biscuit
52	696144	Strike, Door
54	3393008	Screw, 10−16 x 1/2
57	3390736	Seal, Door
58	690081	Catch, Door Assembly
60		Handle, Door
	8521931	Sage
	8521932	Pewter
61		Toe, Panel
	697215	White
	3979197	Pewter
	3977764	Biscuit

Optional Parts Not Included

Dryer Exhaust Kit (For Side & Bottom Venting)

62	279818	White
	279969	Pewter
	279925	Biscuit

BULKHEAD PARTS

For Models: GEW9868KQ1, GEW9868KL1, GEW9868KT1
(Designer White) (Pewter) (Biscuit)

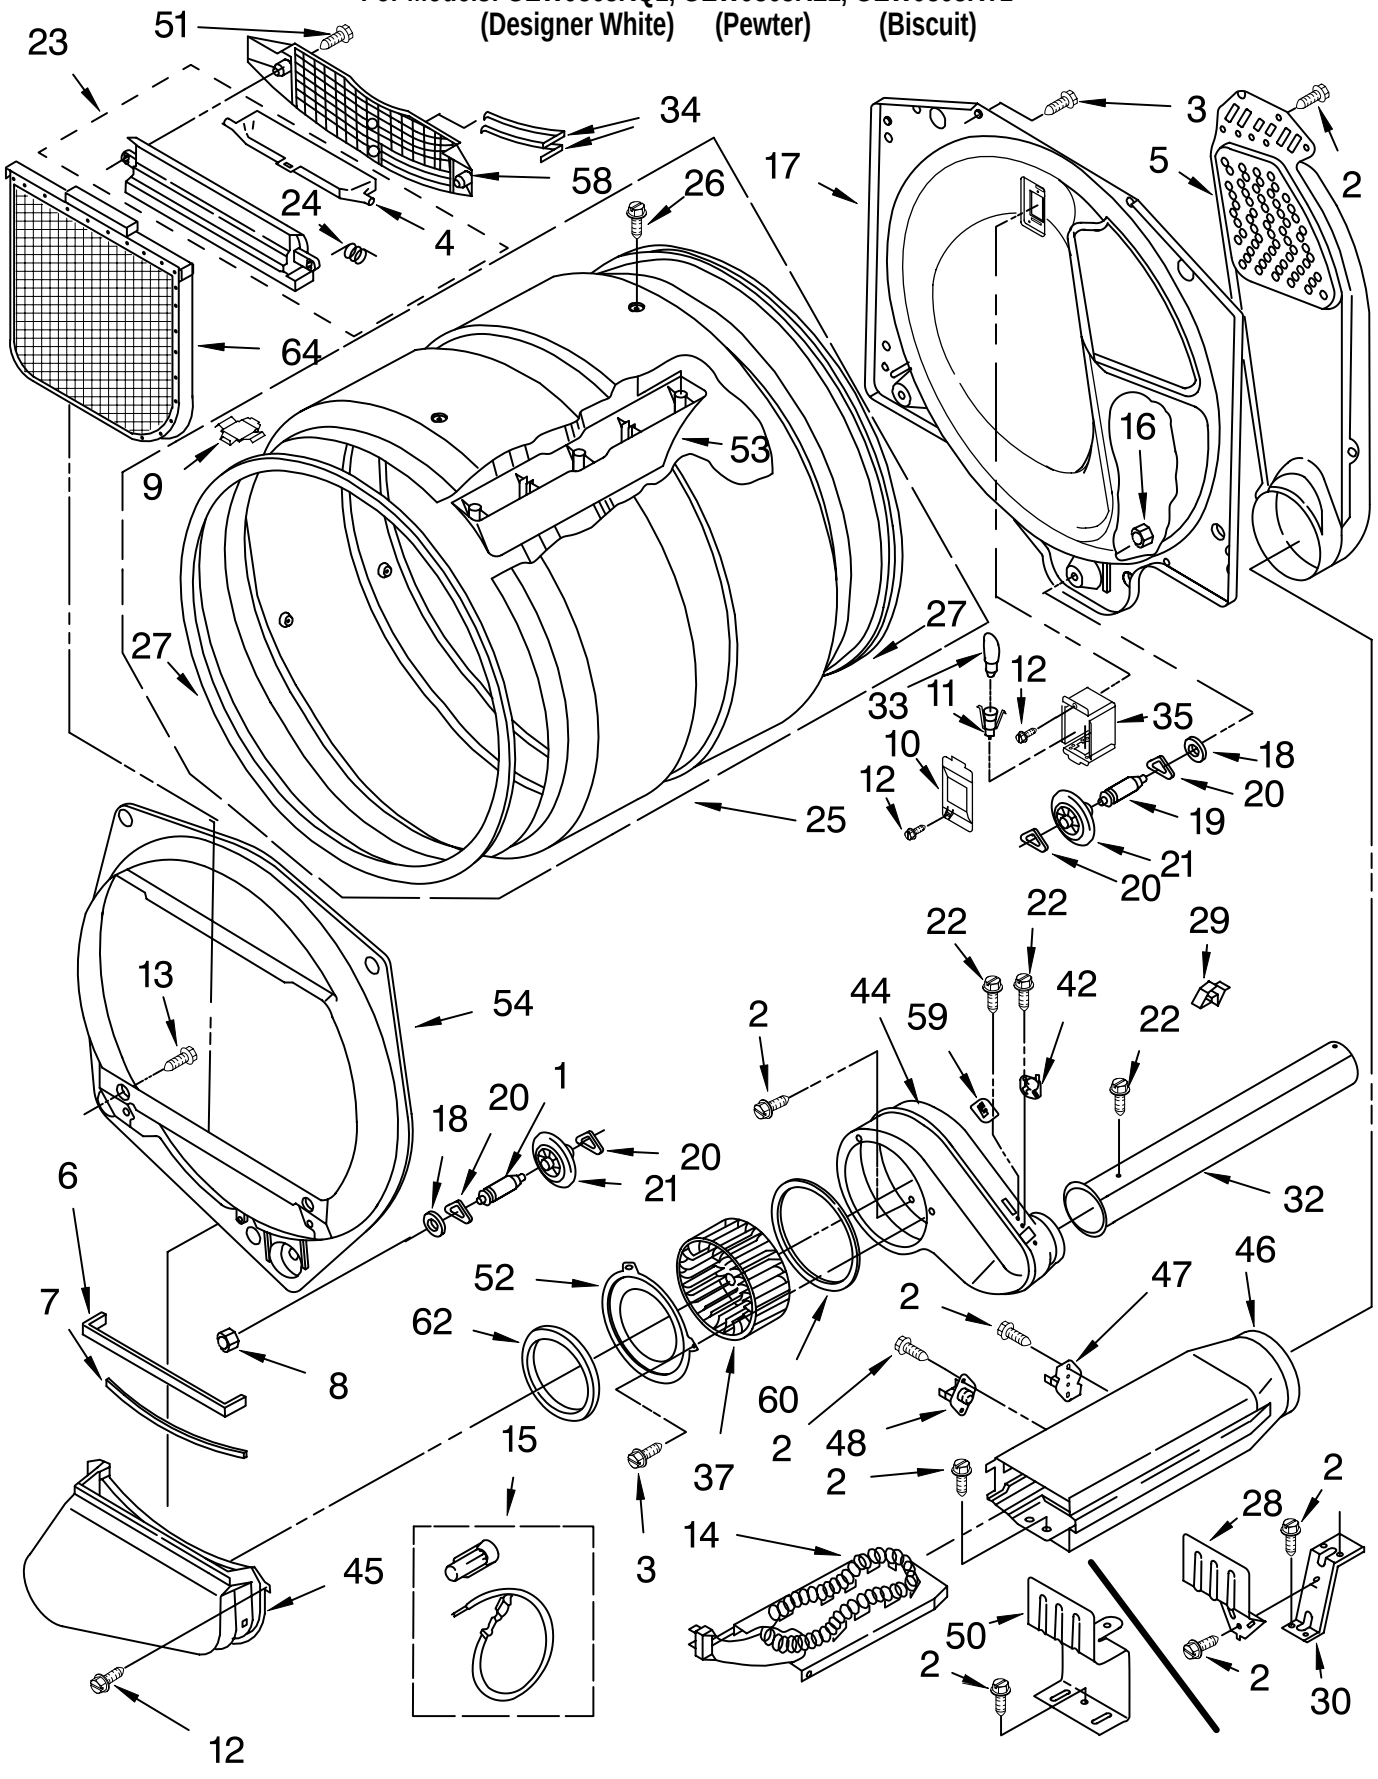

BULKHEAD PARTS

For Models: GEW9868KQ1, GEW9868KL1, GEW9868KT1
(Designer White) (Pewter) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	3399508	Shaft, R.H. Thread
2	90767	Screw, 8−18 x 3/8
3	3390647	Screw, 8−18 x 1/2
4	3394984	Door, Lint Screen
5	697354	Air Duct Assembly
6	697813	Seal, Outlet Housing
7	697814	Seal, Drum Front
8	3359452	Nut,3/8 x 16(R.H.)
9	8066086	Drum Hole Plug
10	3402841	Lens, Drum Light
11	3403634	Socket Assembly
12	487909	Screw, 10−15 x 1/2
13	695240	Screw, 8−18 x 1/2
14	3387747	Heater Element
15	279457	Terminal Wire Kit (For Heater Element Wiring Harness Repair)
16	3387709	Nut, 3/8−16 (L.H.)
17	8520836	Bulkhead, Rear
18	3387459	Washer, Support
19	3399509	Shaft, L.H. Thread
20	690997	Ring, Tri
21	8536973	Roller, Support
22	3390646	Screw, 8−18 x 5/16
23	3394985	Outlet Housing Assembly
24	3394986	Spring, Lint Screen Door
25	8318215	Complete Drum Assembly
26	97787	Screw, 11−16 x 3/4
27	697694	Seal, Drum
28	697699	Shield, Heat
29	3388229	Clip
30	697700	Bracket, Heater
32	8318486	Exhaust Pipe
33	3406124	Bulb, Light
34	3387223	Electrode, Sensor
35	3977373	Bracket, Drum Light
37	697772	Wheel, Blower
42	3976615	Thermostat, Internal−Bias
44	8530038	Housing, Blower
45	8530036	Lint Duct Assembly
46	3392537	Heater Box
47	3977394	Thermal Cut−Off (Includes Illus. 48)
48	3390291	Thermostat 250°F (121°C)
50	8066099	Bracket, Heater Box
51	3387230	Screw, 10−16 x 1
52	697771	Cover, Blower (Includes Illus. 62)
53	697693	Baffle, Drum
54	697557	Bulkhead, Front
58	8299979	Grill, Outlet
59	3390719	Thermal Fuse
60	697770	Seal, Cover Plate
62	697769	Seal, Lint Duct
64	3390721	Lint, Screen

OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	DESCRIPTION
		ACCESSORY PARTS
	4392067	Kit, Dryer Repair
	8522199	Kit, Dryer Vent Testing
		PAINT, TOUCH−UP (1/2oz.)
	72017	White
	4396174	Pewter
	4392899	Biscuit
		PAINT, PRESSURIZED SPRAY (12 oz.)
	350930	White
	4396175	Pewter
	4392901	Biscuit
	350938	Primer, Gray
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
	4392900	Biscuit(Uncut)